

INFOHIO

PRODUCT UPDATE FROM OHIO MEDICAL

In This Issue


- Medical Vacuum Filters
- Oil-Less Compressors
- Vacuum Pump Oil
- Replacement Refrigerated and Desiccant Dryers
- Parts for Busch Pumps
- HS Claw for Evac

Medical Vacuum Filters

Protect your vacuum pumps and work environment with the use of Medical grade vacuum filters. These are designed for the removal of liquids, solids, and sub-micron particles in hospital and lab systems. The in-line design makes them easy to install and service. The clear bucket allows for ease of monitoring, while the sterilizable drain flask is easy to remove. ULPA media has an efficiency level of 99.99% @ 0.12 microns. Available in sizes up to 4", either individually or as a dual filter bank.



Oil-Less Compressors

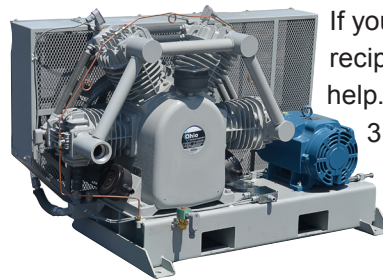

If your facility needs to replace oil-less reciprocating compressors, Ohio Medical can help. Our line of oil-less compressors ranges from 3 to 30 HP. Choose either a bare compressor or a complete module with motor, belts, guard, aftercooler, temperature switches, and unloader solenoid.

Dimensional drawings for compressors and modules are posted on our website, www.ohiomedicalparts.com.

Motor HP	OMC Model	Quincy Model	Ingersoll-Rand
3 HP	P3-M	QRDS-3	N.A.
5 HP	P5-M	QRDS-5	OL5X5
7.5 HP	P7-M	QRDS-7	OL5X7.5
10 HP	P10-M	QRDS-10	OL10X10
15 HP	P15-M	QRDS-15	OL15X15
20 HP	P20-M	QRDS-20	OL15X20
25 HP	P25-M	N.A.	N.A.
30 HP	P30-M	N.A.	OL25X30

Vacuum Pump Oil

Ohio Medical offers vacuum pump oil for rotary vane, liquid ring, and claw vacuum pumps. Our most popular offering is 40 wt. full synthetic oil for rotary vane pumps. It provides superior protection, particularly in high heat environments, while extending service intervals. Our oil is available in quart, 1 gallon, and 5 gallon containers. For high demand requirements, we can also supply our oil in 55 gallon drums. **Call our Customer Support Team (847-855-6211) for immediate delivery.**



Replacement Refrigerated and Desiccant Dryers

Ohio Medical offers a complete line of energy efficient refrigerated dryers. These cycling dryers provide consistent dew points, while saving energy. They feature LED readouts and digital controls that adjust to system air demand and ambient temperature. They also feature timed solenoid drains with adjustable open and close times. Sizes range from 20 to 325 CFM. Call us for dryer sizing assistance.

We also offer replacement desiccant dryers. Each model is available in a standard configuration or with the Energy Saving (ES) feature. This includes internal dew point monitoring and automatic purging based on the required dew point. We also carry inlet/discharge filters, pressure regulators, and other accessories.



Parts for Busch® Pumps

If your vacuum system is equipped with Busch oil sealed rotary vane vacuum pumps, call OMC Customer Support (847-855-6211) for cost effective service parts. We stock oil and exhaust filters, as well as rebuild kits. If your pump needs to be replaced, ask us for a quote on a new rotary vane pump. We stock pumps from 1 to 25 HP and offer tri-voltage motors. Dimensional drawings for all models are posted on our website, www.ohiomedicalparts.com.



HS Series Claw

If your facility is equipped with a dedicated waste gas EVAC system, consider our unique HS Series claw vacuum pumps. They can be run either intermittently or continuously, as many EVAC systems do. They operate quietly and at low temperatures. They do not contain oil in the pumping chamber and there are no vanes to replace. If you are looking to replace an existing pump, contact us (847-855-6211) for sizing consultation.



Contact Us:

1111 Lakeside Drive
Gurnee, IL 60031
847-855-6211

support@ohiomedical.com
www.ohiomedicalparts.com
www.ohiomedical.com