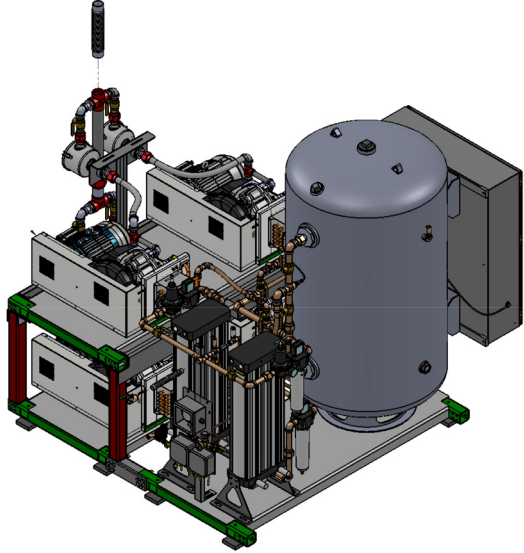


AS750B-ST4-DD-240 Scroll Compressor System

	Configuration	Quadruplex Stack Mount
	System Capacity	71.4 SCFM @ 50PSIG
	Capacity per Pump	23.8 SCFM @ 50 PSIG
	Motor Horsepower (HP)	7.5 HP
	Total System Horsepower	30 HP
	Receiver Size	240 Gallons
	Available Voltage	208/230/460 3 Phase contact factory for other voltages
<p>Note: System capacity is stated with one pump in reserve.</p>		

COMPRESSOR MODULE

- Belt driven oil-less scroll compressor
- Pressures up to 115 psi
- Externally lubricated bearings
- Each module includes inlet filter, isolation valve, after cooler, relief valve and temperature switch

AIR RECEIVER

- Constructed to ASME standards
- Coated for corrosion resistance
Equipped with 3 valve bypass
- ASME pressure relief valve
- Pressure gauge & automatic drain
- Source isolation valve
- Flex connectors & mounting pads included

SYSTEM CONTROLS

- Underwriters Laboratories listed
- Nema 12 enclosure
- Safety disconnect handles
- Fuseless design
- HMI (Human Machine Interface) System
- NFPA required local alarms/remote monitoring

AIR TREATMENT MODULE

- Dual heatless desiccant dryers
- Dew Point & Co monitoring devices with local alarm and dry contacts for remote monitoring
- Dew Point dependent switching for minimal air loss
- Dual filtration systems removes liquids and particulates
- Automatic drain, line pressure regulator, final pressure relief valve